

TENSION ROD



INSTALLATION GUIDE

STEP 1
Push both ends of the rod into the base, as shown in the picture above.

STEP 2
Tune the end of the rod to your desired length.

STEP 3
Adjust the rod to your desired length and tighten it after.

STEP 4
After tightening the rod, place the end of the rod on the wall and fine tune it to secure both ends so that it is tightly against the wall. Make sure the rod is tighten.

STEP 5
Check if the rod is firmly secured onto the wall, then the installation is complete.

1. Rotate the rod to adjust the length
2. After measuring the distance between two end, tighten it by rotating the rod.
3. Secure the rod in your preferred location

Property	Specification
Size	1" Diameter, adjustable widths
Material	Bright Stainless Steel
Origin	China

Product ID	Description	Adjustable Size	Case Pack	Carton Size
TR2440	Stainless Steel Tension Rod	24"W to 40"W	6 EA	25"x5"x5"

